

Contents

SECTION 1	Introduction	1-1
	Welcome	1-1
	Before You Fly	1-2
	About this Guide	1-4
	Revision History	1-8
SECTION 2	System Overview	2-1
	General Description	2-1
	System Configuration	2-3
	Operational Warnings	2-5
	Acronyms and Abbreviations	2-7
	Coloring Conventions	2-11
	Caution/Warning/Advisory System	2-13
	Displays	2-18
	Controls	2-18
	Database and Software Updates	2-21
	Attitude/Heading Reference System	2-28
	Standard AHRS (Crossbow)	2-28
	Optional AHRS	2-29
	Air Data Computer (ADC)	2-30
	GPS/WAAS Receiver	2-31
	Analog Interface Unit (AIU)	2-33
	Input Signals	2-34
	Autopilot Output Signals	2-34
	Component Failure Modes	2-35
SECTION 3	Display Symbology	3-1
	PFD Symbology	3-2
	Basic PFD	3-3
	PFD on Approach	3-4
	PFD on Approach (cont.)	3-5
	Unusual Attitude Recovery Mode	3-6

Helicopter PFD	3-7
Navigation Display Symbology	3-71
Basic Moving Map	3-72
Moving Map with Instrument Approach	3-73
Moving Map with STAR	3-74
Conventional HSI/RMI Format	3-75
Traffic Display	3-76
Lightning Display	3-77
North-Up Arc Mode	3-78
North-Up Centered Mode	3-78
Heading-Up Centered Mode	3-79
Failure Modes	3-130
GPS Failure	3-133
ADC Failure	3-137
AHRS Failure	3-138
ADC and GPS Failure	3-139
ADC and AHRS Failure	3-140
GPS and AHRS Failure	3-141
GPS, ADC, and AHRS Failure	3-142
SECTION 4 Button/Menu Functions	4-1
Overview	4-1
Button Functions	4-3
PFD Top Level Menus	4-5
Flight Plan Function	4-6
ACTV (Active) Function	4-7
ACTV (Active) Options	4-10
INFO Function	4-13
OBS (Omnibearing Selector) Function	4-15
HDG (Heading) Function	4-16
NRST (Nearest) Function	4-17
Direct-To Function	4-18
Timer Function	4-20
Bug Set Function	4-21
PFD Declutter (DCLTR) Function	4-23
Navigation Display Top Level Menus	4-24
Faults Function	4-26
Strike Format Function	4-28
Traffic Format Function	4-29

Fuel Set Function	4-30
MFD Function	4-31
Moving Map Format Function	4-32
SECTION 5 Step-by-Step Procedures	5-1
Setting Altimeter	5-1
Setting Fuel Quantity	5-2
Flight Plans	5-3
Create and Store a Flight Plan	5-4
Activate a Stored Flight Plan	5-7
Edit a Stored Flight Plan	5-8
Reverse a Stored Flight Plan	5-11
Delete a Stored Flight Plan	5-13
Transfer Flight Plans Between Aircraft	5-14
Waypoints	5-16
Nearest Waypoint	5-16
Direct to Any Waypoint	5-18
Recenter on Route	5-20
Activate a Waypoint within an Active Route	5-21
Add a Waypoint or Airway to an Active Route	5-23
Delete a Waypoint From an Active Route	5-25
Create a User Waypoint	5-27
Edit a User Waypoint	5-33
Waypoint Information (NavData)	5-36
Transfer User Waypoints Between Aircraft	5-38
Using Airways (Victor/Jet Routes)	5-40
Approaches, DPs, and STARs	5-42
Select a VFR Approach	5-42
Select an IFR Approach	5-46
Select a DP or STAR	5-50
Missed Approach Arming Procedure	5-54
Parallel Track Function	5-56
Omnibearing Selector Function	5-58
Automatic OBS -- GPS	5-58
Manual OBS -- GPS	5-59
VOR OBS -- HSI	5-61
HSI Source Selection	5-62
Timer Functions	5-64
Count Up	5-64

Count Down	5-65
Flight Timer	5-66
Turn the Timer Off	5-66
BUG Functions	
(Heading, Altitudes, Airspeed, V-Speeds).	5-67
Set the Heading Bug	5-67
Turn Heading Bug Off	5-67
Specify a Target Altitude Bug	5-68
Specify a Minimum Altitude	5-69
Specify a Target Airspeed	5-70
Specify a Climb Speed	5-71
Turn Bugs Off	5-71
Set V-Speeds	5-71
Vertical Navigation (VNAV)	5-72
Change VNAV Angles	5-72
VNAV Altitudes	5-72
Controlling The Displays	5-77
Change MFD Display Pages	5-77
Show/Hide Terrain (Moving Map).	5-77
Show/Hide LAT/LON (Moving Map).	5-78
Show/Hide RMI/ADF (Moving Map).	5-78
Show/Hide RMI/ADF (HSI).	5-79
Show/Hide Strikes (Moving Map).	5-79
Scale the Moving Map	5-79
Change Moving Map Format	5-80
Change Moving Map Function	5-81
Declutter the Moving Map	5-82
Auto Declutter Navigation Symbology	5-83
Declutter The PFD	5-83
Zoom the PFD	5-84
Controlling the Stormscope Display	5-86
Centered or Arc Format	5-86
Route On or Route Off	5-86
Strike or Cell Mode.	5-86
Clear Strikes.	5-86
Strike Test	5-87
Controlling the Traffic Display	5-88
Route On or Route Off	5-88
Traffic Test	5-88

Tuning Radios using the EFIS	5-89
Analog Autopilot Interface	5-90
Departure, Enroute, and Arrival Procedures	5-90
Non-precision approaches	5-90
Precision approaches	5-91
Vectors to final	5-91
Missed approaches	5-91
Digital Autopilot Interface	5-94
SECTION 6 Quick Start Tutorial	6-1
SECTION 7 IFR Procedures	7-1
Overview of Approaches	7-1
Basic Instrument Approach Operation	7-2
Approaches with Course Reversals	7-15
Approaches with DME Arcs	7-20
Vectors to Final (VTF)	7-24
ILS Approaches	7-26
Missed Approaches	7-29
Departure Procedures (DPs)	7-33
Standard Terminal Arrival Routes (STARs)	7-37
SECTION 8 Appendix/Index	8-1
Emergency/Abnormal Procedures	8-1
Emergency Procedures	8-1
Abnormal Procedures	8-2
Normal Procedures	8-4
Power Up and Self Test	8-4
Operation	8-4
Operating Tips	8-8
Descent Planning	8-8
Terrain Clearance	8-8
Departure Airport Information	8-8
Pattern Entry	8-9
Zoom Mode	8-9
Unique Names for Flight Plans	8-9
Your Instrument Scan	8-10
TAWS Functions	8-11
Jeppesen NavData Chart Compatibility	8-40

Aeronautical Information Compatibility	8-40
Navdata Name Conventions:	
Waypoint Identifiers	8-43
Data Logging and Retrieval	8-53
Overview	8-53
Data Format	8-54
Service Difficulty Report	8-55
Warranty	8-56